

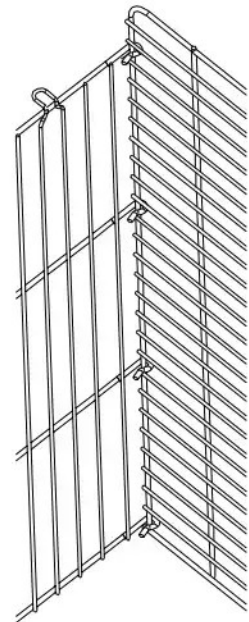
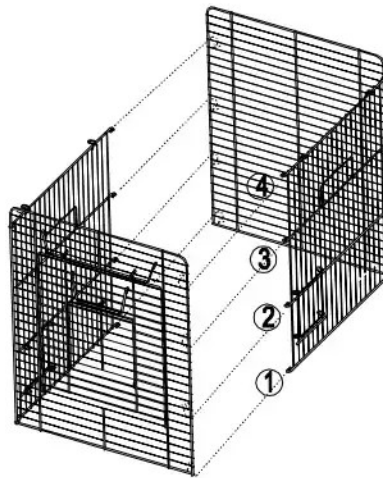


1901-1R Assembly Instruction

1. Wire body.

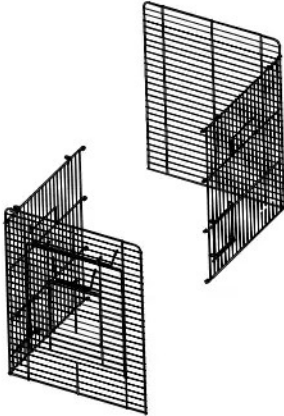




Start at the bottom corner. Pull the extended wire hook from the side panel onto the outer wire of the back panel. Continue up the seam in the same manner. Please refer to Fig (a).

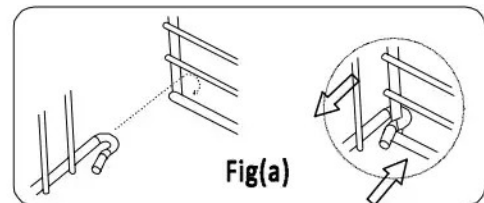

2. Grille, removable tray, base.





Place the removable grille into the base and slide the removable tray into the opening. Set the assembled mesh into the base.

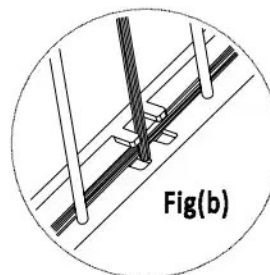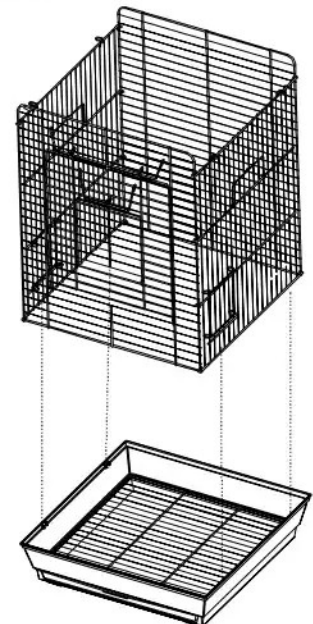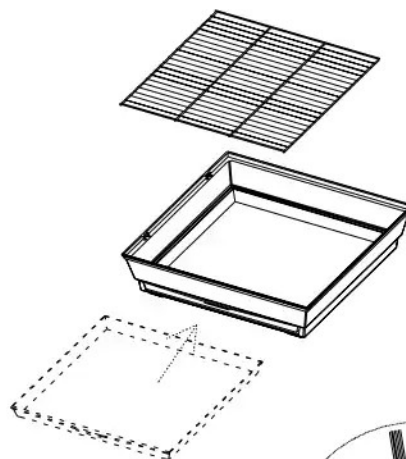


Set the assembled mesh into the base, catching the bottom wire of the side panels under the tabs along the rim. Please refer to Fig (b).

3. Perches, cups.

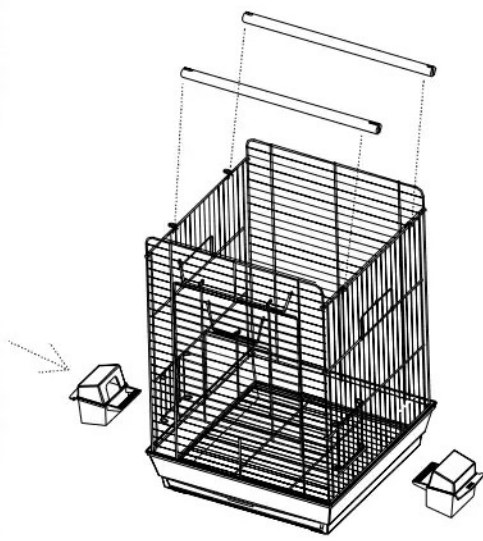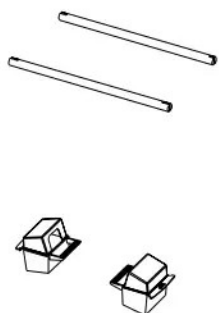

Assemble the two-piece cups, slide the cup doors (D1 and D2) open and insert the cups into the openings. Please refer to Fig (c).

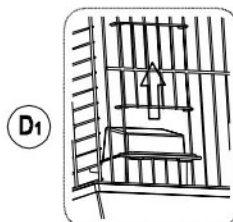


Fig(c)




Fig(d)

Install Perches on a vertical wire, and set the bottom to rest on a horizontal wire for stability. Please refer to Fig (d).


4. Top wire and short perches.

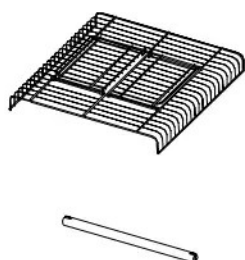

Starting at the top, hook the outer wire of the roof under the metal tabs along the top edge of the front and back panels. Please refer to Fig (e).



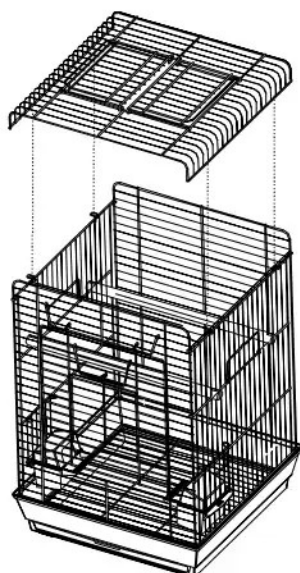


Fig(e)

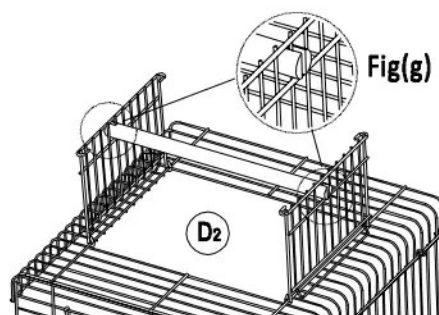

Fig(g)

When opening the top door D2, install the short perch on a vertical wire, and set the bottom to rest on a horizontal wire for stability. Please refer to Fig (g).

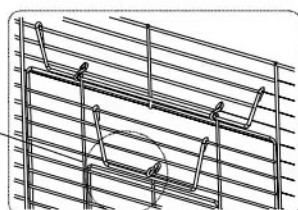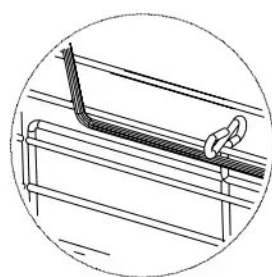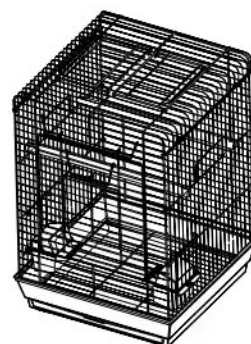

The way to open:
Large access door with a smaller inset door design. Remove the U-lock first and then open the door D3, D4 or both per your need.

The way to close:
Close the door D3&D4 and then fasten the U-lock as shown.

